

Figure 1

00925703-09097

APPROVED	O.G. FIG.	
BY	CLASS	SUBCLASS
DRAFTSMAN		

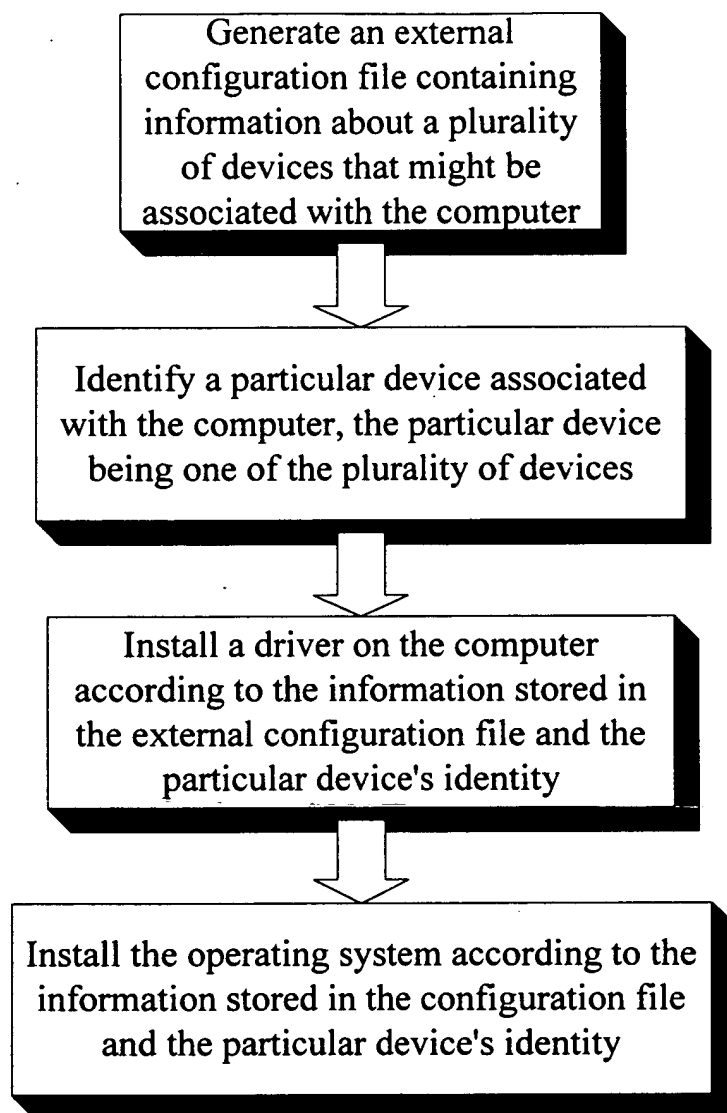


Figure 2

2025703-09097

APPROVED	O.G. FIG.	
BY	CLASS	SUBCLASS
DRAFTSMAN		


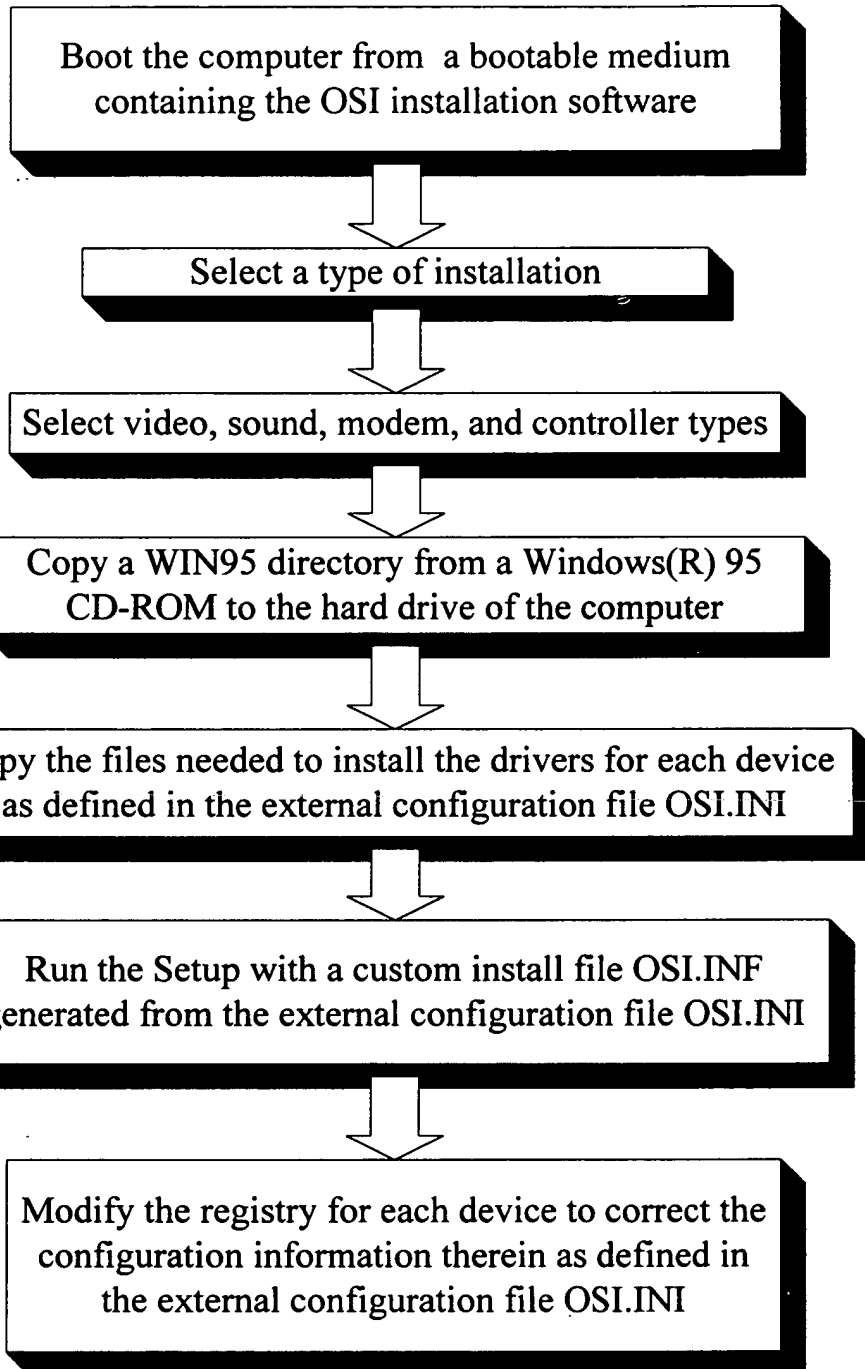



Figure 3

08925703-09097

Figure 4A

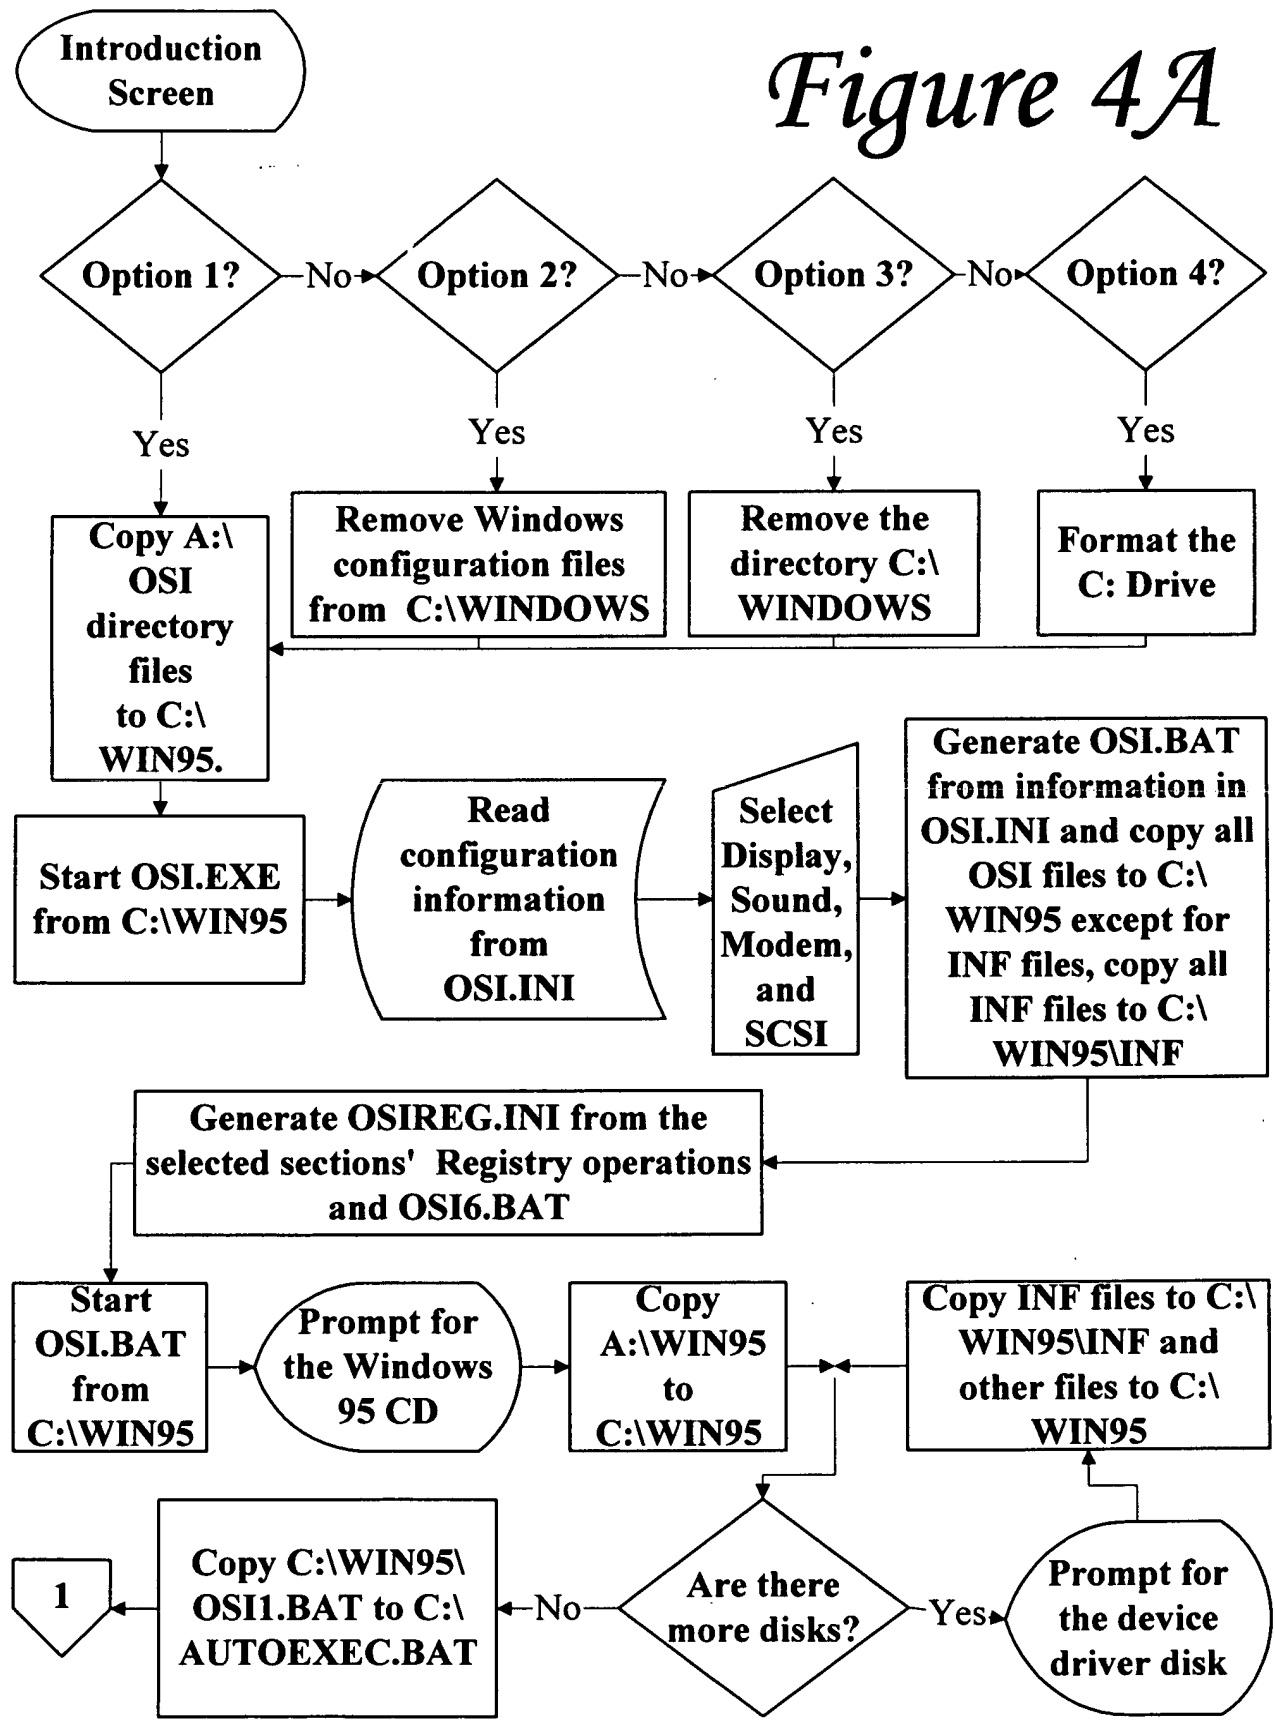

08925703-000997
466060-EO25680

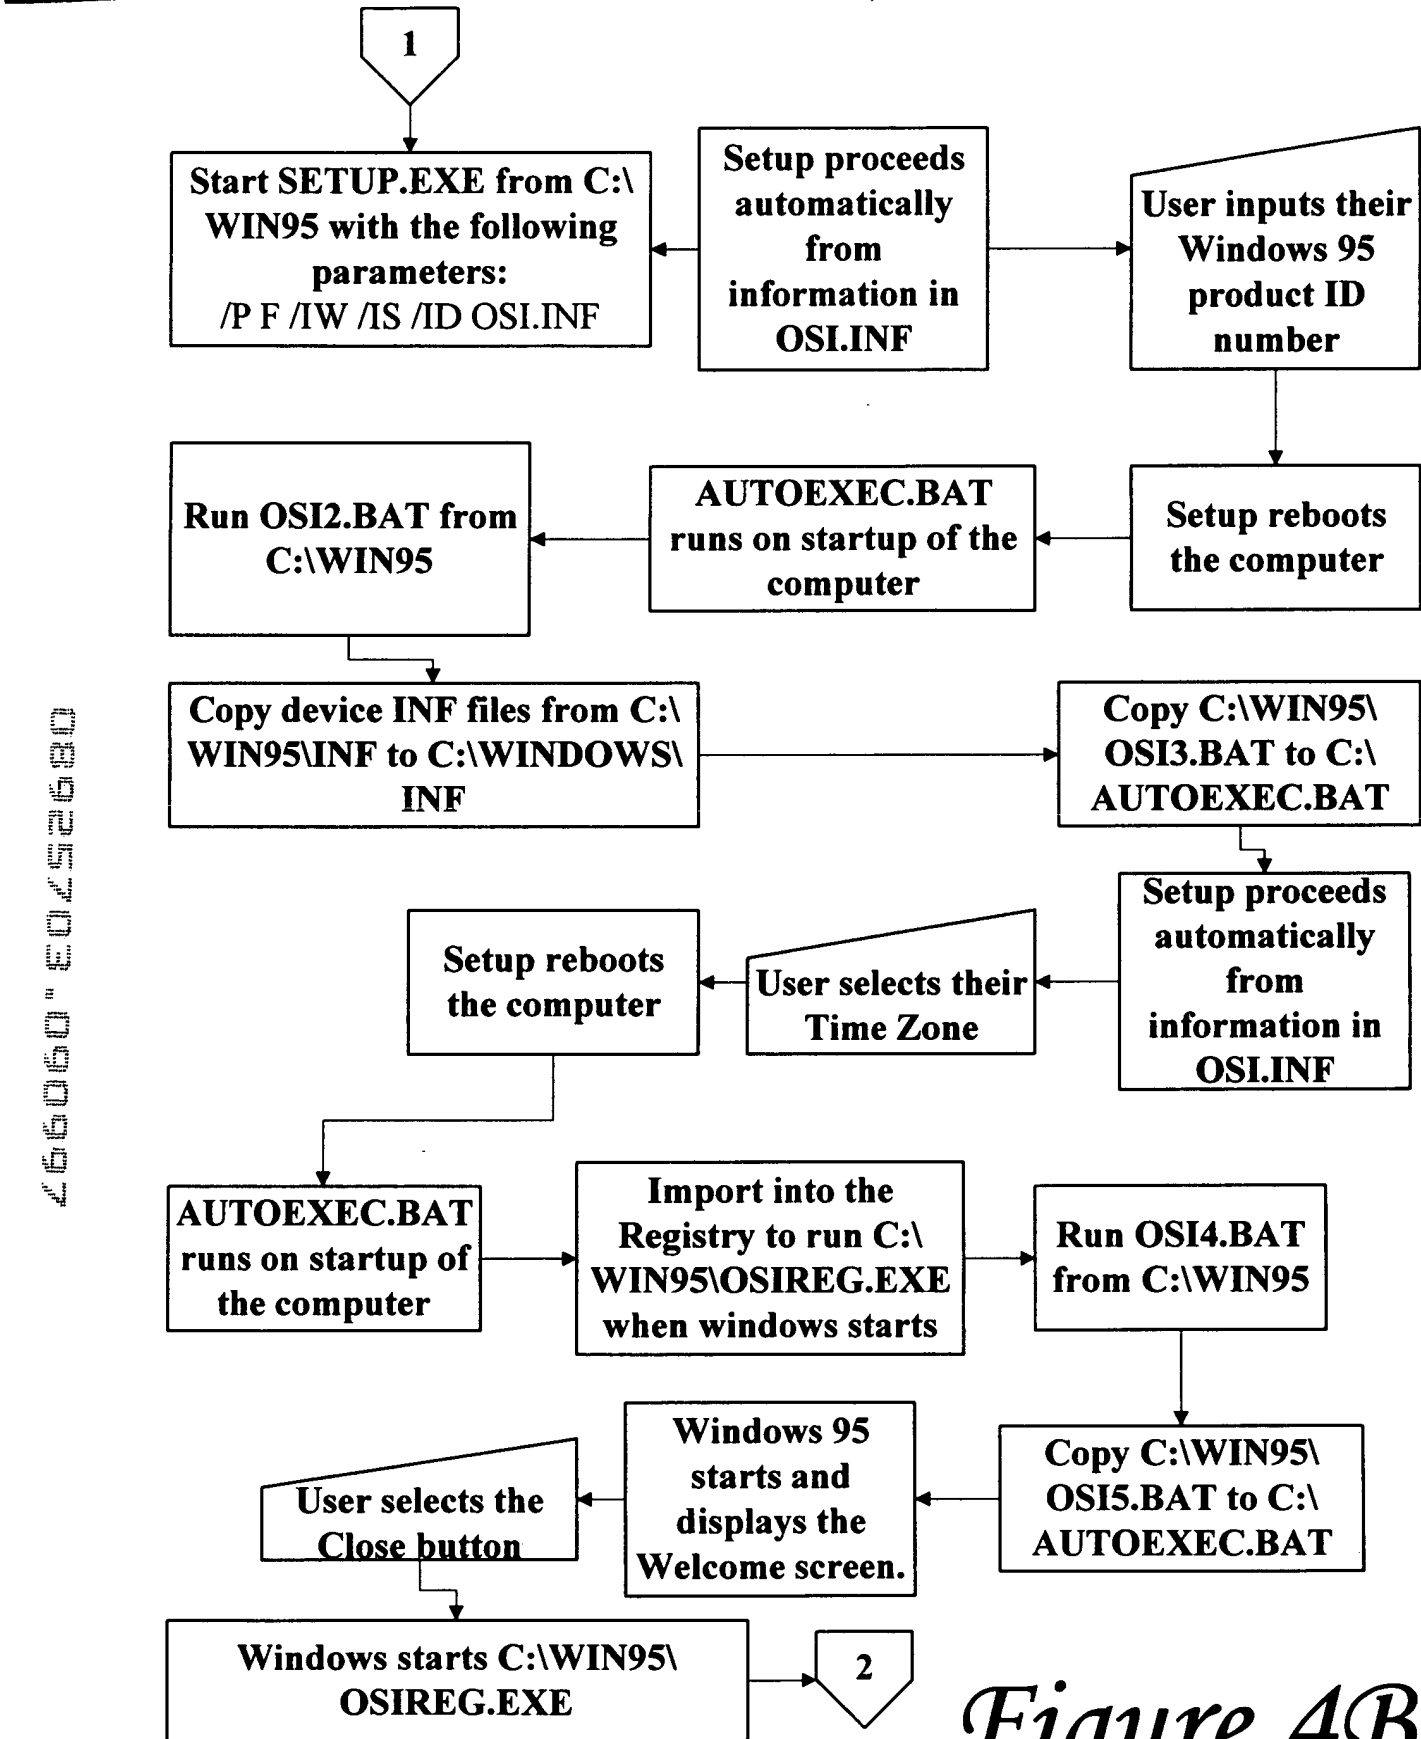

06925703-050997

Figure 4B

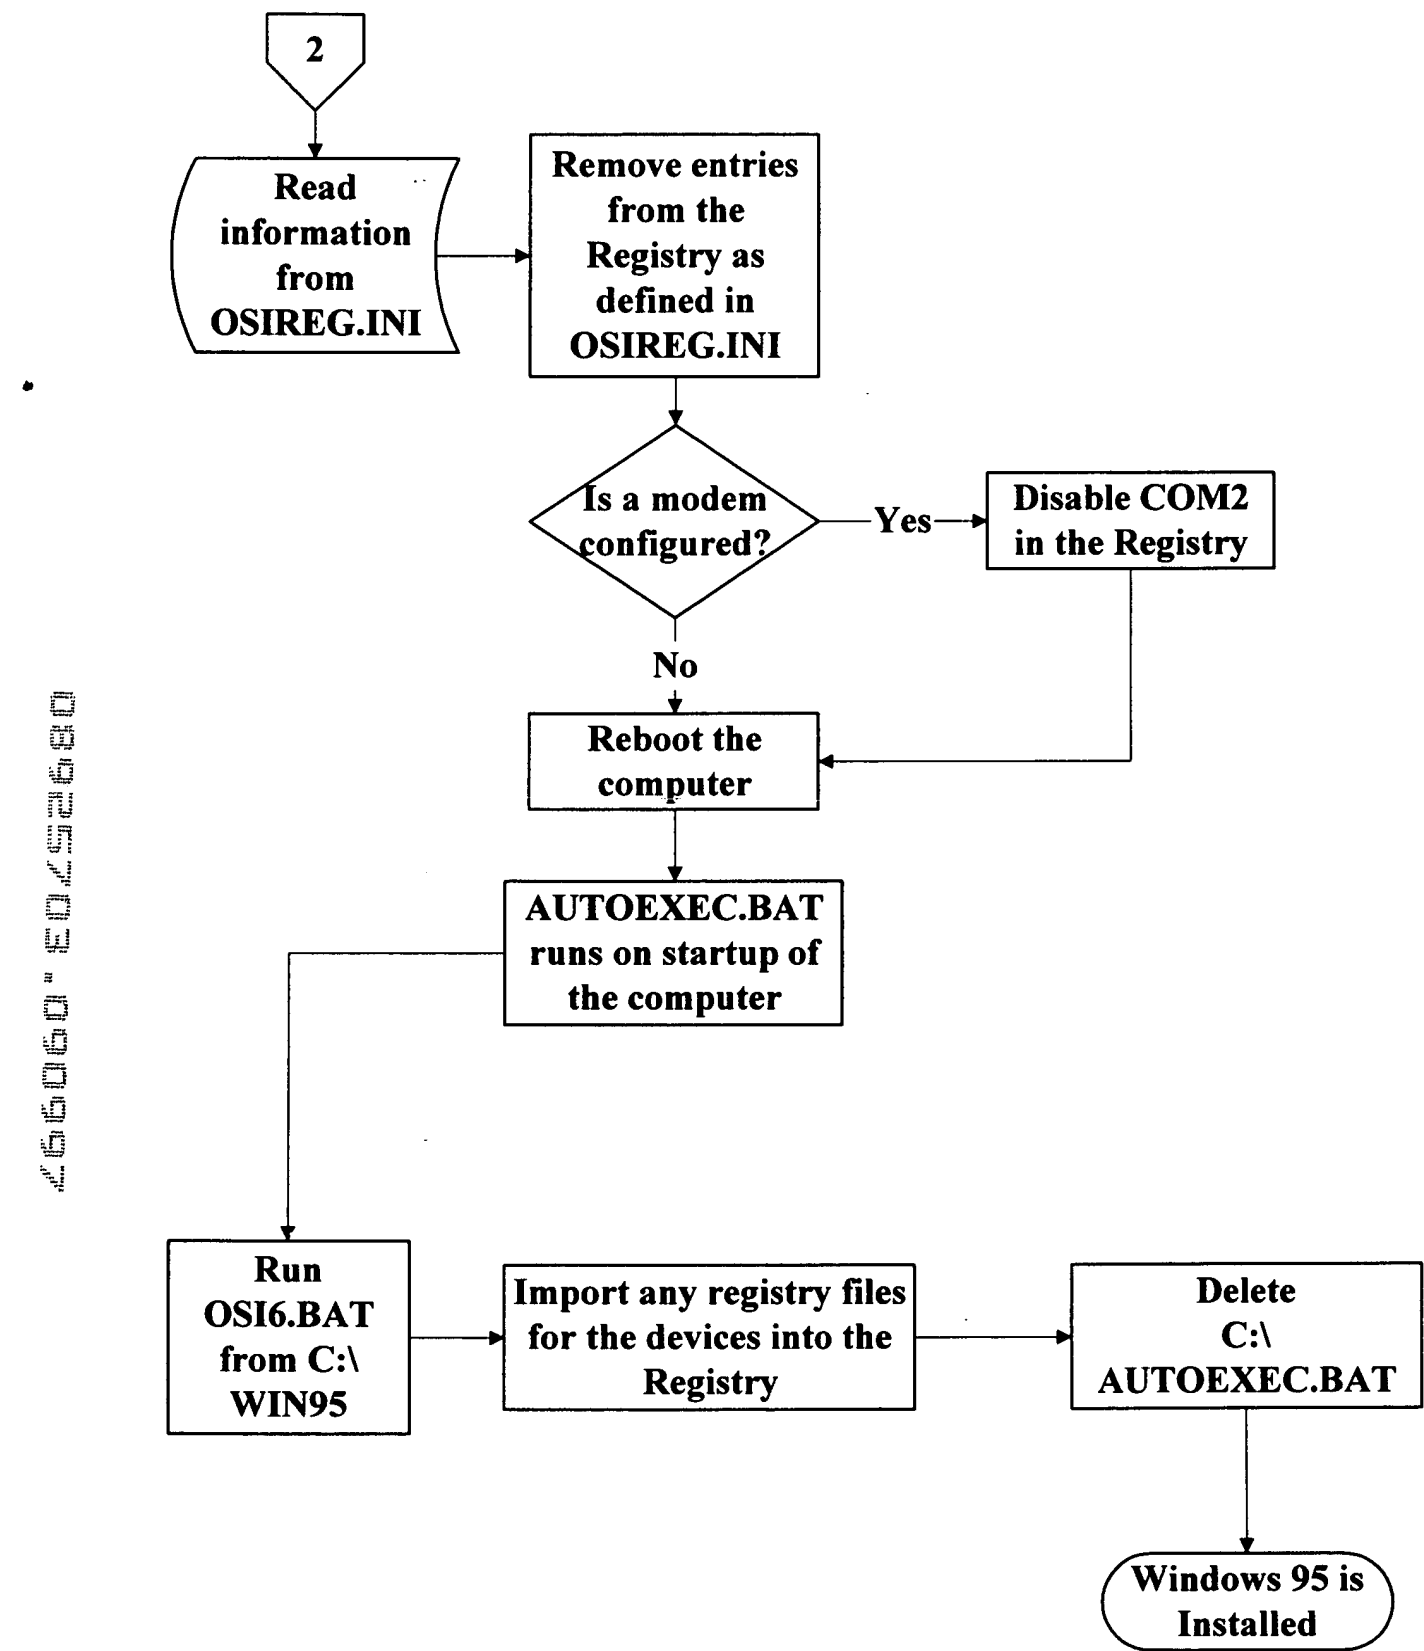


Figure 4C

APPROVED	O.G. FIG.	
BY	CLASS	SUBCLASS
DRAFTSMAN		

Boot the computer from a bootable medium containing the OSI software

Obtain from the PnP BIOS and PnP card the devices installed in the computer

Select the type of installation

Copy files needed to install the driver for each device as defined in the external configuration file OSI.INI

Copy a WIN95 directory from a Windows(R) 95 CD-ROM to the hard drive of the computer

Run the setup with a custom install file OSI.INF generated from the external configuration file

Modify the registry for each device for the correct configuration as defined in the external configuration file OSI.INI

Figure 5

08925703.0997
266060" E0752680

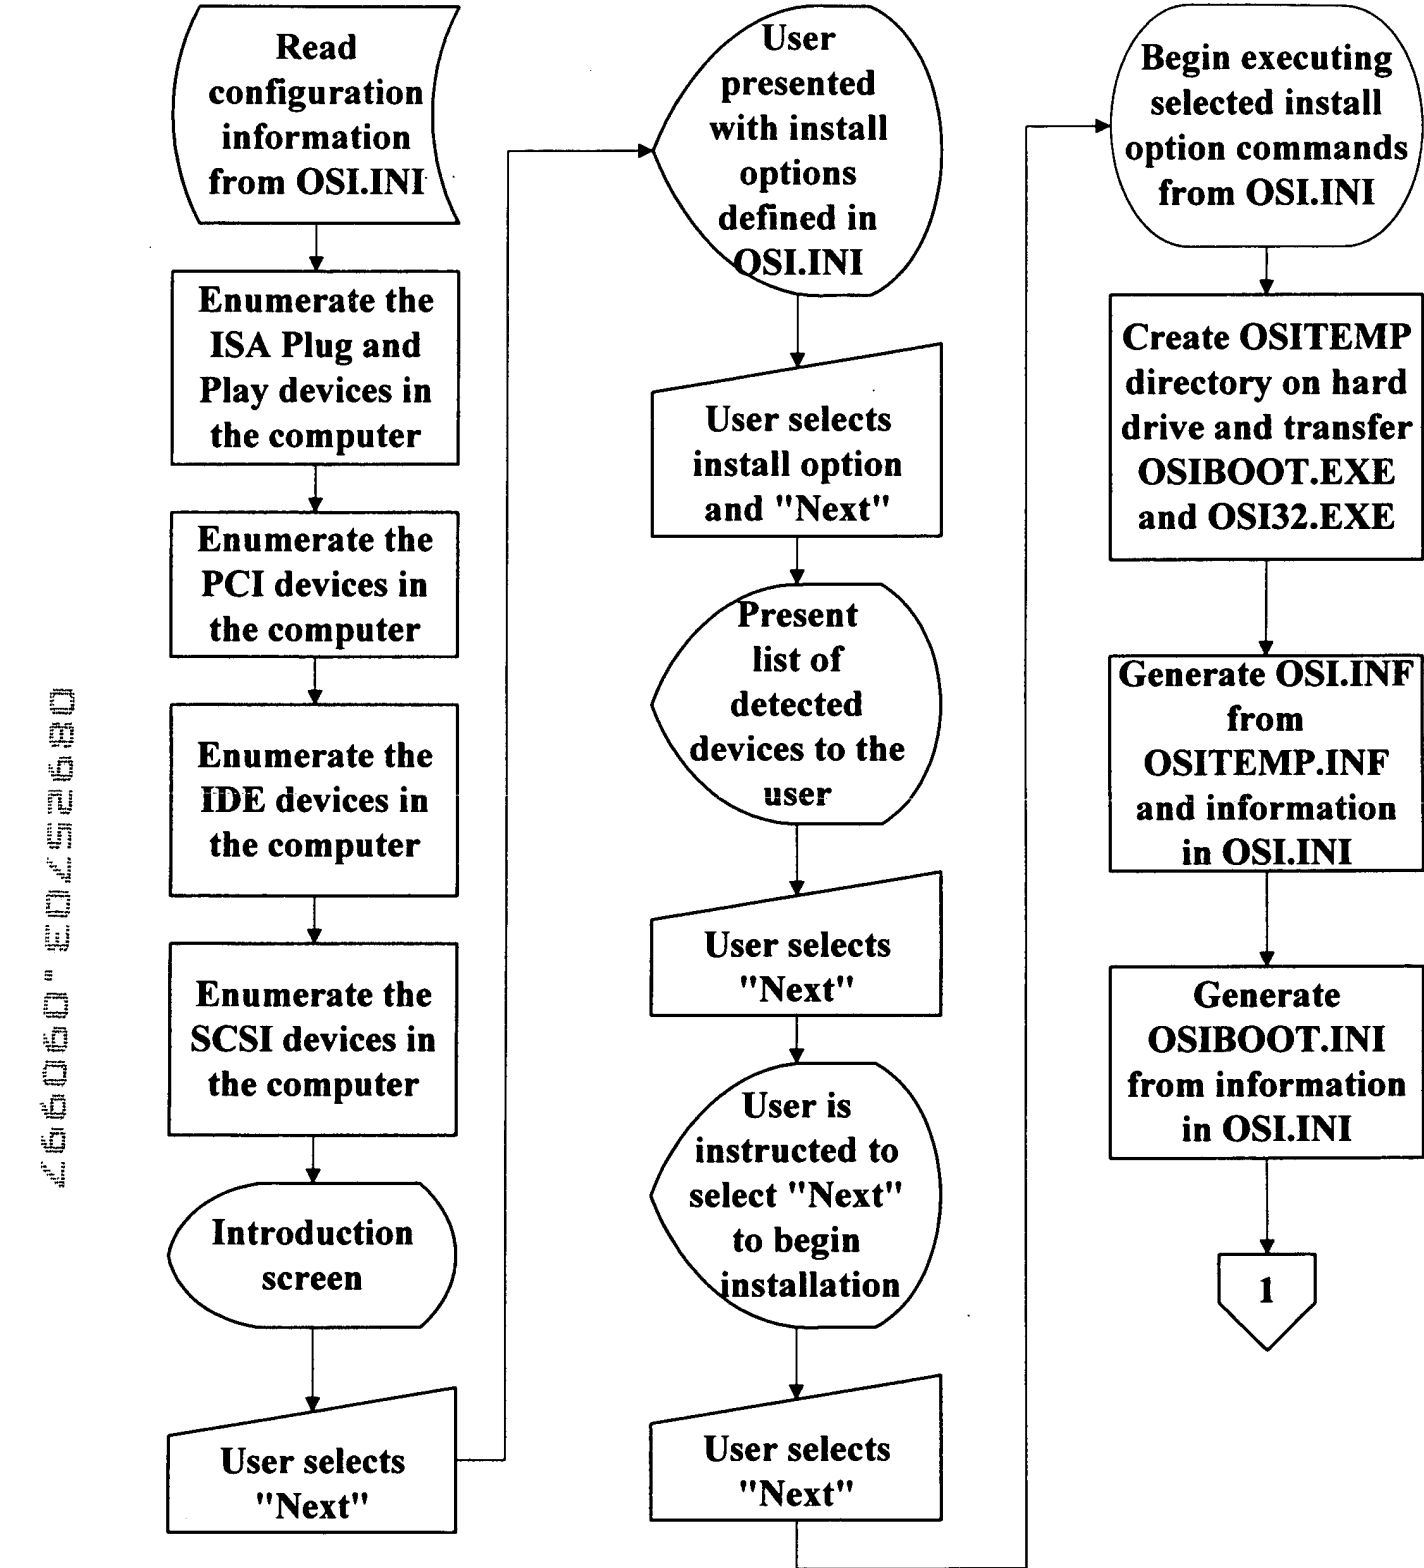


Figure 6A

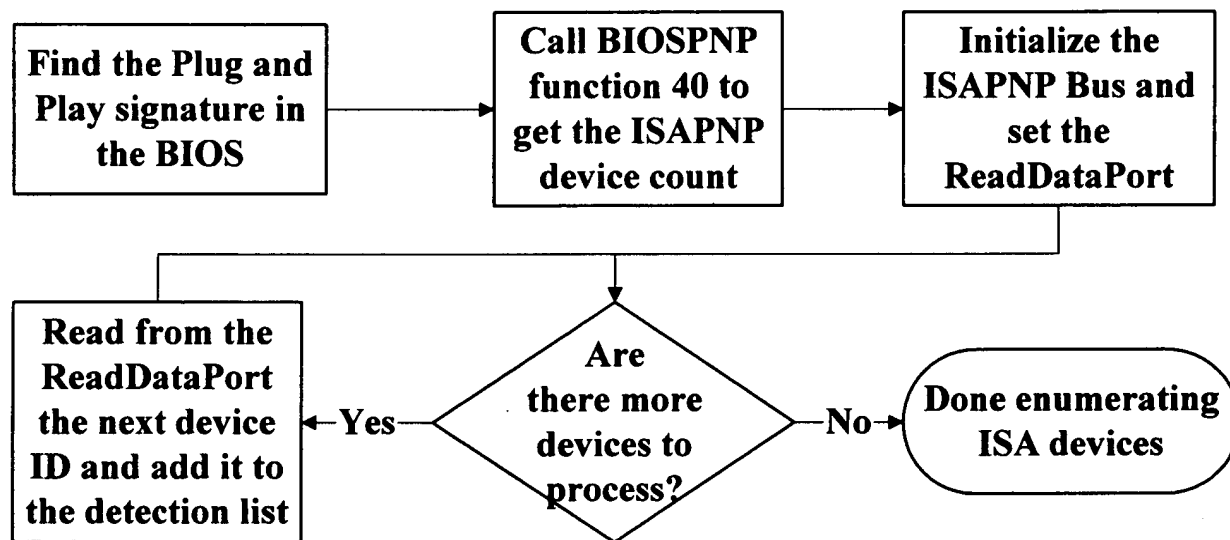


Figure 6B

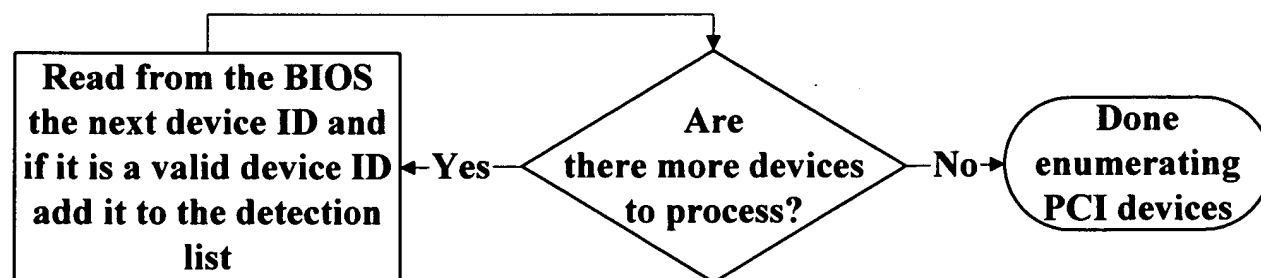


Figure 6C

08925703-000997
466060-EO/52680

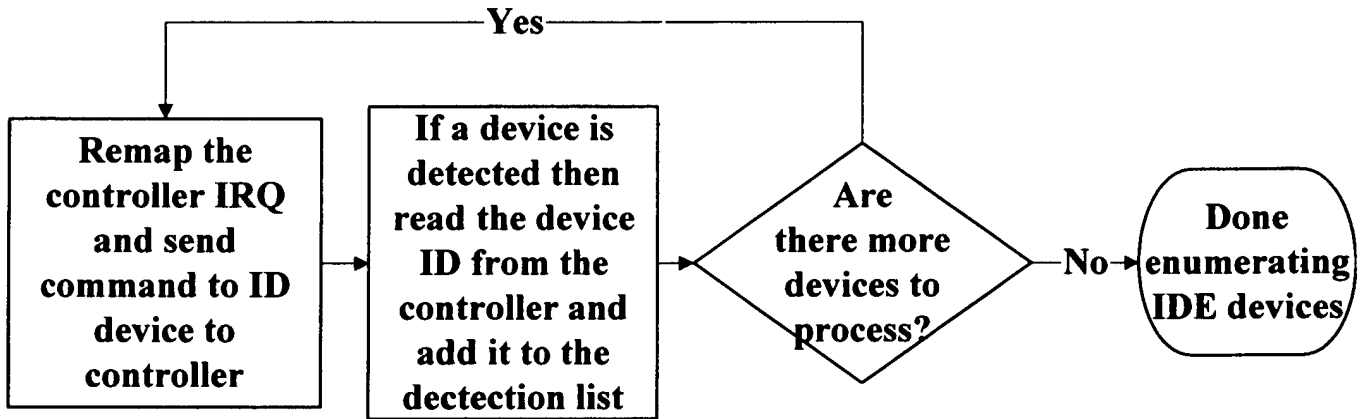


Figure 6D

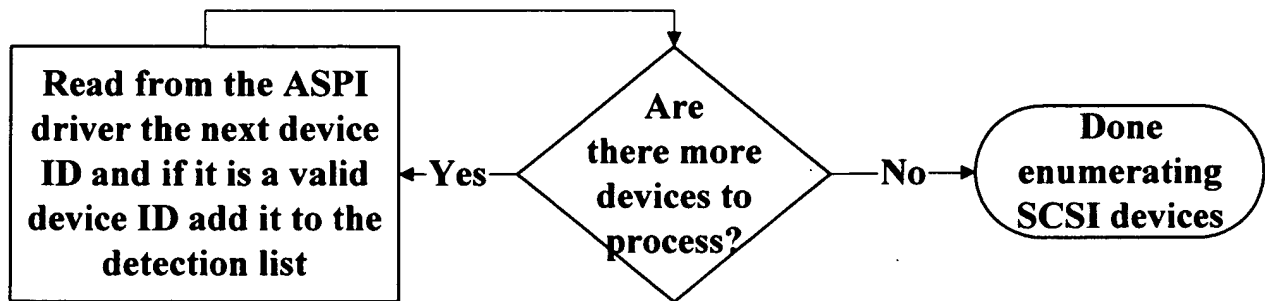


Figure 6E

08925703-090997

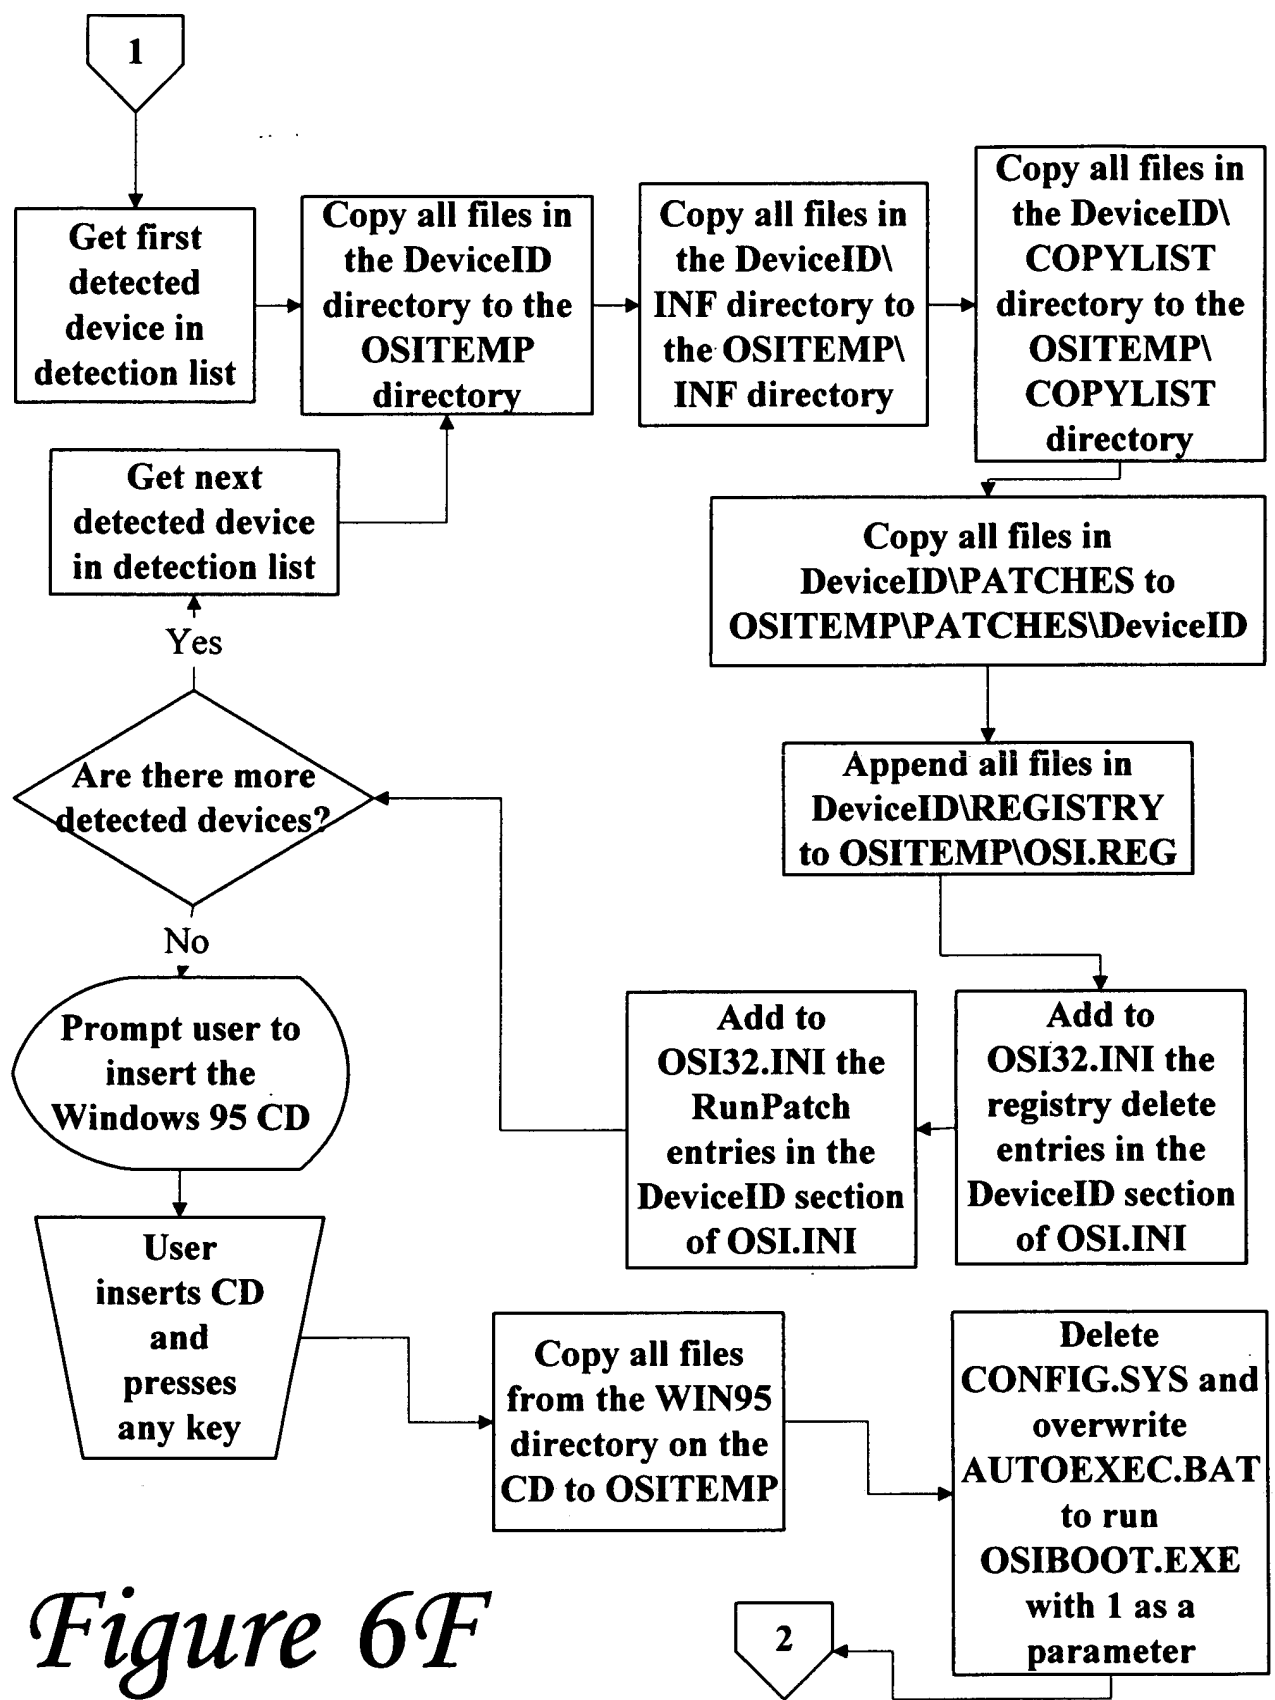


Figure 6F

08925703-090997

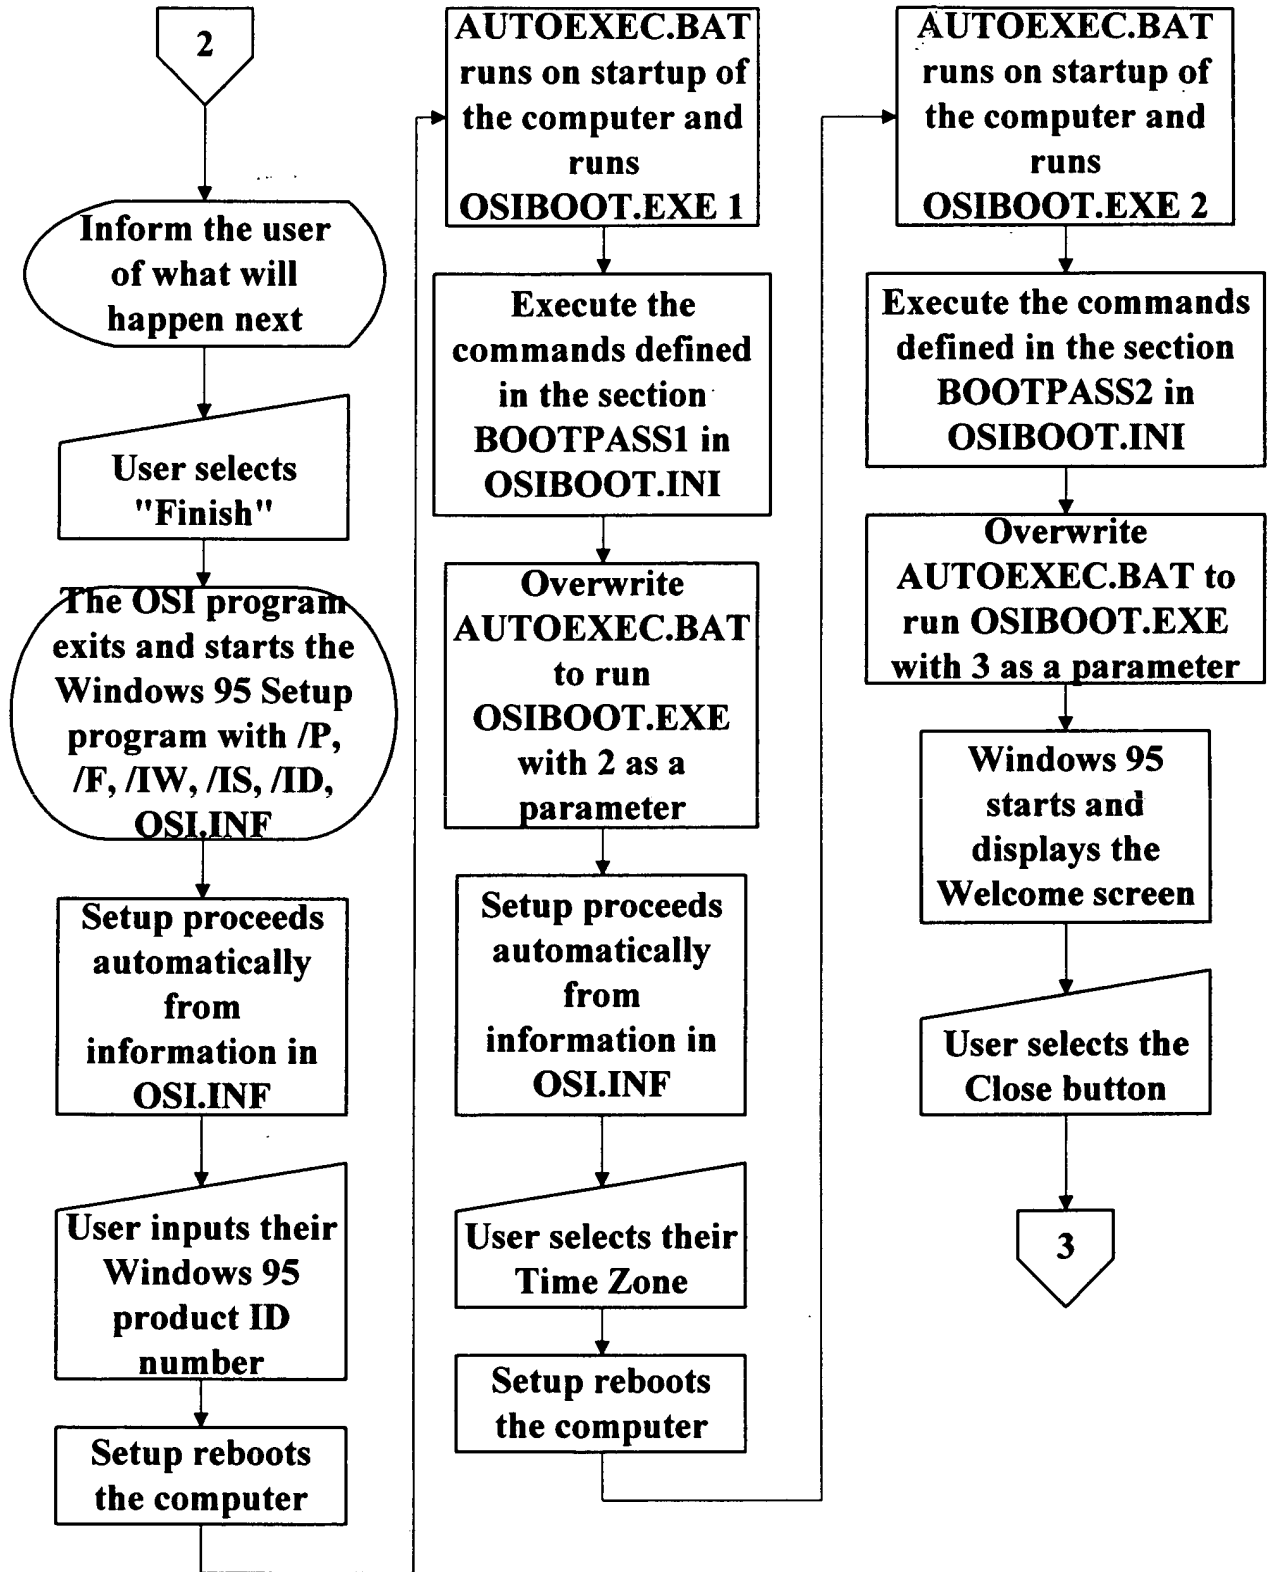


Figure 6G

APPROVED	O.G. FIG.	
BY	CLASS	SUBCLASS
DRAFTSMAN		

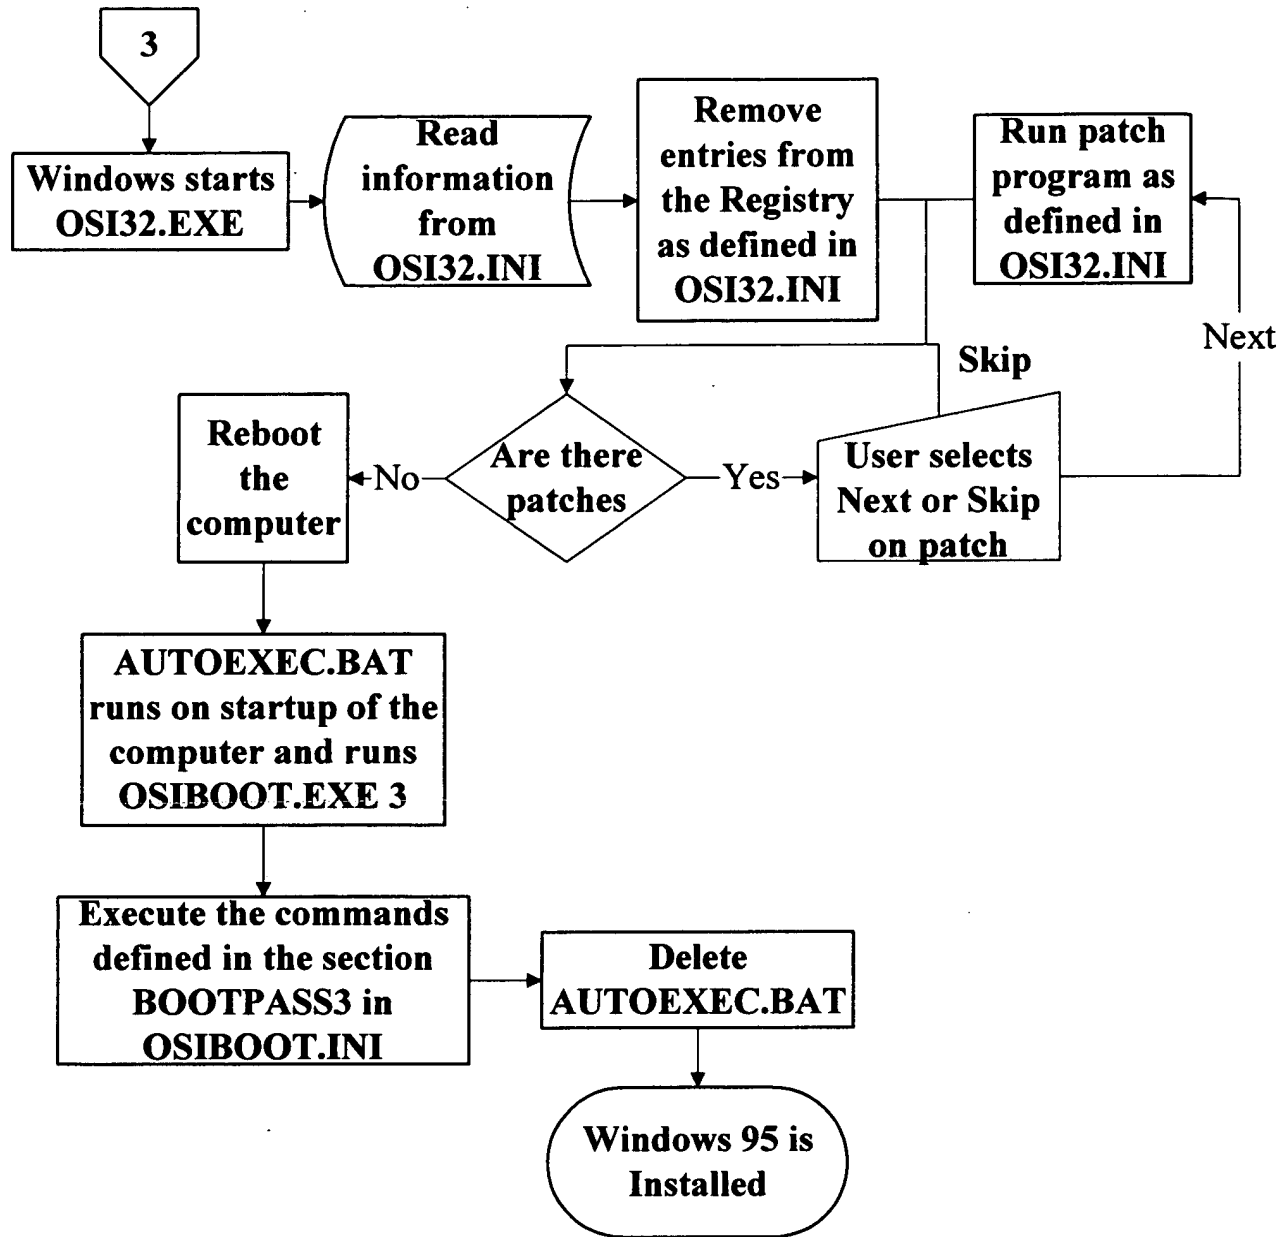


Figure 6H

00925703-090997